



Version 1.1.3

Installation instructions

1. Go to www.easylaser.com > Lifecycle support > Software download > XT11 display unit firmware update.
2. Download the following file: XT_1.1.3.zip
3. Unzip the files to the root of the USB memory stick.
4. Start the XT11 Display unit.
5. Insert the USB memory stick into the Display unit.
6. On the start view, tap  to open Settings.
7. Tap  to open System information.
8. Select and install “ota_1.1.3.xtu”.

Support for 10 languages

- English
- German
- Russian
- Spanish
- Portuguese
- Swedish
- Korean
- Japanese
- Chinese (Simplified)
- Chinese (Traditional)

Improved settings menu

Custom logotypes and user information in reports

Support for 0.001 mm / 0.1 mils resolution

Tables available in both measurement view and result view

Improved thermal camera software (XT11)

Various bug fixes